

## 1973 MARK IV

### FUSES & CIRCUIT BREAKERS NOT LOCATED IN FUSE OR CIRCUIT BREAKER PANEL

**16 Amp. C.B. In Headlight Switch** – Protects Parking Lights, License Plate Light, Tail Lights, Ash Tray Light, Marker Lights, Headlight ON Relay & Indicator Light feed, Headlight Buzzer.

**16 Amp. C.B. (Also In Headlight Switch)** – Protects Headlight circuits.


**C.B. Integral With Motors** – Protects Motors and Circuits for Power Seats. Power Windows.

**6 Amp. C.B.** – Attached to center vertical support brace. Protects Luggage Compartment Lock Release Circuit.

**8.25 Amp. C.B. Integral With Wiper Switch** – Protects Two Speed and Intermittent With Wiper Circuits.

**4 Amp. Fuse In Feed Line** – Protects Automatic Headlight Dimmer Circuit.

- ① (6 AMP. FUSE) INSTRUMENT PANEL AND CLUSTER LAMPS, (HEATER OR A/C, HEADLAMP SWITCH, RADIO, ASH TRAY, C/LIGHTERS, CLOCK, WINDSHIELD WIPERS AND PRND21 LAMPS
- ② (35 AMP. C.B.) HEATER – AIR CONDITIONER
- ③ (20 AMP. C.B.) POWER WINDOWS
- ④ (15 AMP. FUSE) COURTESY LAMPS, GLOVE BOX, LUGGAGE COMPARTMENT, CLOCK FEED, CONSOLE, DOME, MAP, IGNITION KEY WARNING BUZZER AND SEATBACK LATCH CONTROL
- ⑤ (30 AMP. C.B.) P/SEATS – P/LATCH AND HORNS
- ⑥ (30 AMP. FUSE) HEATED BACKLITE
- ⑦ (20 AMP. FUSE) CIGAR LIGHTER (REAR DOORS)
- ⑧ (20 AMP. C.B.) STOP LAMPS AND HAZARD WARNING SYSTEM
- ⑨ (20 AMP. FUSE) C/LIGHTER, INSTRUMENT PANEL AND ELECTRIC DOOR LOCK SYSTEM
- ⑩ (3 AMP. FUSE) SURE TRACK BRAKE SYSTEM
- ⑪ (7.5 AMP. FUSE) WARNING LAMPS, DOOR AJAR, SEAT BELT, LOW FUEL, OIL PRESSURE, WATER TEMPERATURE, DUAL BRAKE WARNING, ELECTRONIC SPARK CONTROL (CALIFORNIA ONLY)
- ⑫ (15 AMP. FUSE) BACK-UP AND CORNERING LAMPS AND TURN SIGNAL FLASHER
- ⑬ (15 AMP. FUSE) RADIO AND POWER ANTENNA
- ⑭ BLANK
- ⑮ (7.5 AMP. FUSE) WINDSHIELD WASHER, REAR WINDOW DEFROSTER FEED, RELAY COIL FEED AND SPEED CONTROL
- ⑯ (7.5 AMP. FUSE) POWER WINDOW RELAY COIL FEED

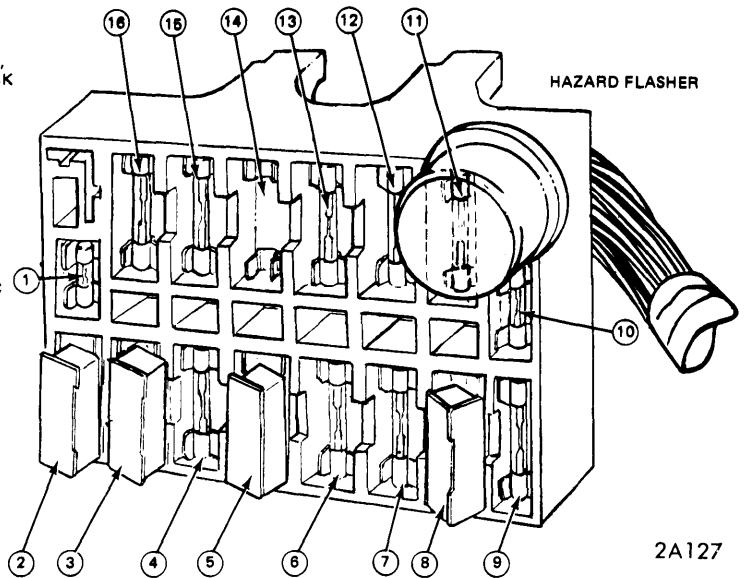

LOCATED LEFT OF STEERING COLUMN ON DASH PANEL

MARK IV FUSE BLOCK