

## CADILLAC

### FUSE BLOCK

Fuse block is located on firewall under instrument panel to left of steering column.

### FLASHERS

**Turn Signal** – Located on steering column lower cover.

**Hazard** – Located on fuse block.

### CIRCUIT BREAKERS

**Headlights (Twilight Sentinel)** – 16.5 amp. (Seville) or 15 amp. (all other models) integral with headlight switch.

**Windshield Wiper** – Integral with windshield wiper switch.

**Rear Window Defogger** – 25 amp. on left side of steering column cover reinforcement.

**Sunroof** – 25 amp. on body bracket at left side of steering column cover reinforcement.

### FUSIBLE LINK

**Fuel Injection Electronic Control Unit** – 18 gauge fusible link located in dark green wire on "BAT" terminal of alternator.

**Climate Control & Body Feed** – 16 gauge fusible link located in black/red stripe wire at junction block (Seville) or starter (exc. Seville).

**Ignition** – 16 gauge fusible link located in red wire at junction block (Seville) or starter solenoid (exc. Seville).

**Headlights** – 18 gauge fusible link located in yellow wire at junction block (Seville) or starter (exc. Seville).

**Charging** – 16 gauge fusible link located in red/white stripe wire at junction block.

### IN-LINE FUSE


**Vanity Mirror** – 10 amp. fuse located behind mirror.

**EFI Fuel Pump** – 10 amp. fuse located left of fuel injection electronic control unit orange wire (Seville) or the brown wire (exc. Seville).

**Theft Deterrent** – 20 amp. fuse for lights located in yellow wire above glove box (Seville) or above radio (exc. Seville). 25 amp. fuse for horn located in black/yellow stripe wire above glove box (Seville) or black/red stripe wire above radio (exc. Seville).

Hazard Warning Flasher

4CA01

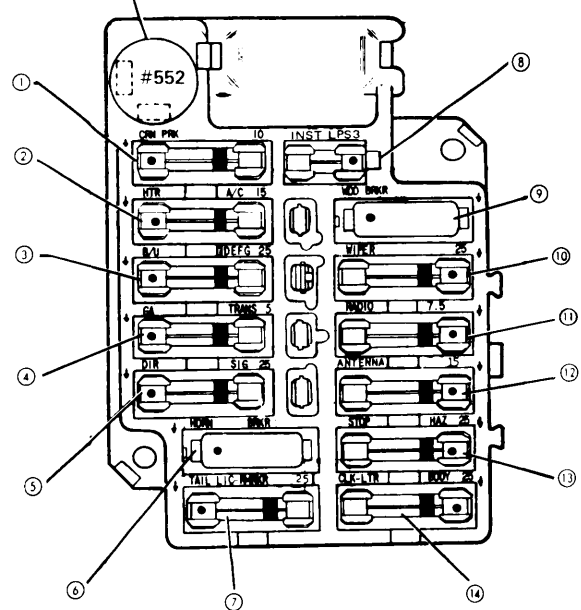

CADILLAC FUSE BLOCK

### CADILLAC FUSE BLOCK CIRCUITS

- ① – 10 amp. Cornering lights, front marker lights, right door ash tray light, park lights, ash tray light.
- ② – 15 amp. Air conditioner relay coil, amplifier and control head, cruise control, alternator telltale (exc. Seville).
- ③ – 25 amp. Back-up lights, downshift solenoid, rear defogger blower (exc. Seville), electric choke (exc. Seville).
- ④ – 5 amp. Oil telltale, fuel gauge, brake telltale, seat belt warning, coolant temperature telltale, fuel economy indicators, alternator telltale (Seville only), trunk detail, washer fluid indicator (exc. Seville).
- ⑤ – 25 amp. Turn signal lights.
- ⑥ – Circuit Breaker Engine temperature telltale, horns, power seats, power door locks, power top, key warning buzzer (exc. Seville).
- ⑦ – 25 amp. Tail, license and marker lights, rheostat control feed (Seville only).
- ⑧ – 3 amp. Instrument panel lights (Seville), rheostat controlled instrument panel lights (exc. Seville).
- ⑨ – Circuit Breaker Power windows.
- ⑩ – 25 amp. Windshield wiper, washer fluid indicator (Seville only).
- ⑪ – 7.5 amp. Radio.
- ⑫ – 20 amp. Power antenna, clock, glove box lamp, instrument panel courtesy lamp and cigar lighter, seat belt module (exc. Seville).
- ⑬ – 25 amp. Stop lights, hazard warning.
- ⑭ – 20 amp. Body feed, courtesy lamps and cigar lighter, trunk light (exc. Seville).