

## FORD MOTOR CO. (Cont.)

**THUNDERBIRD & CONTINENTAL MARK IV  
FUSE BLOCK CIRCUITS**

- ② — 30 amp. (Thunderbird) Air conditioning, automatic temperature control blower OR 20 amp. (Mark IV) Autolamp, turn signals, back-up lights, automatic temperature control clutch.
- ③ — 30 amp. (Mark IV) Automatic temperature control blower OR 20 amp. (Thunderbird) Autolamp, turn signals, back-up lights, air conditioning clutch.
- ④ — 15 amp. Courtesy lights, glove box, luggage compartment, clock feed, dome lamp, seatback latch control, ignition key warning buzzer.
- ⑤ — 30 amp. Circuit Breaker Power seats, automatic seat-back release latch, horns.
- ⑥ — 30 amp. Electric de-ice, automatic temperature control blower (Mark IV).
- ⑦ — 20 amp. Cigar lighters (doors).
- ⑧ — Anti-theft module, hazard flasher system, stop lights.
- ⑨ — 20 amp. Cigar lighter (instrument panel), power door lock system.
- ⑩ — 4 amp. Sure-Track brake system.
- ⑪ — 15 amp. Power antenna, radio.
- ⑫ — 7.5 amp. Speed control, windshield washer, heated electric de-ice relay control, relay coil feed.
- ⑬ — 20 amp. Circuit Breaker Power windows, electric trunk lid (Mark IV).
- ⑭ — Blank.
- ⑮ — 7.5 amp. Cornering lamps.
- ⑯ — 7.5 amp. Door ajar, seat belt, low fuel, oil pressure, temperature, dual brake warning lights.

## OLDSMOBILE

**FUSE BLOCK**

**All Models** — Fuse block is located under the instrument panel and mounted to the cowl.

**CIRCUIT BREAKERS**

**Headlamps** — Circuit breaker, located in headlamp switch.

**Power Seat** — Circuit breaker, located on fuse panel.

**Power Windows** — Circuit breaker, located on fuse panel.

**FUSIBLE LINK**

Two fusible links are incorporated in wiring system. A black fusible link at main chassis wiring harness junction block to protect main harness. A brown one at the starter solenoid protects the starting circuit.

**IN-LINE FUSES**

**Air Conditioning** — 30 Amp. In-line fuse, located at junction block to A/C harness.

**Tempmatic** — 30 Amp. In-line fuse, located at junction block to A/C harness.

**A/C Compressor** — Thermal Limiter, located at compressor harness.

**Rear Window Defogger** — 30 Amp. In-line fuse, located at junction block to defogger harness.


**Tru-track Brake** — 5 Amp. fuse In-line, located in Tru-track brake harness.

**Power Antenna** — 20 Amp. in-line fuse located in power antenna harness.

**FLASHERS**

**Hazard** — Located on fuse panel.

**Turn Signal** — In clip behind left side of instrument panel.

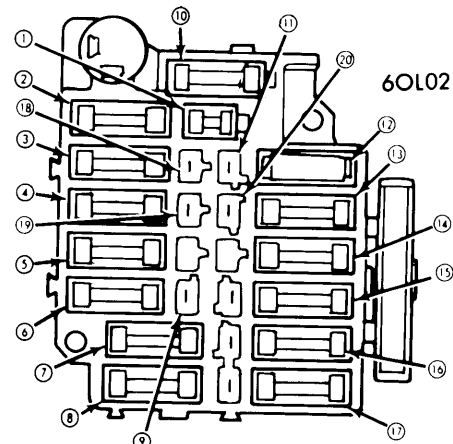

**88, 98, TORONADO & CUTLASS (EXC. 6 CYL. M/T)  
FUSE BLOCK**


**88, 98, TORONADO  
& CUTLASS (EXC. 6 CYL. M/T)  
FUSE BLOCK CIRCUITS**

- ① — 4 amp. Instrument panel lights.
- ② — 20 amp. Turn signals, back-up lights, air cushion restraint.
- ③ — 20 amp. Transmission control, park brake light, cruise control, seat belt warning.
- ④ — 20 amp. Tailgate ajar.
- ⑤ — 20 amp. Heater, air conditioner, idle stop solenoid.
- ⑥ — 10 amp. Spare.
- ⑦ — 25 amp. Windshield wiper.
- ⑧ — 10 amp. Radio.
- ⑨ — Relay feed PINK wire to accessory junction block for power windows, seats, door locks, etc.
- ⑩ — 20 amp. Air Cushion restraint.
- ⑪ — Power feed ORANGE wire to accessory junction block for power windows, seat, door locks, etc.
- ⑫ — 40 amp. circuit breaker.

## OLDSMOBILE (Cont.)

### 88, 98, TORONADO CUTLASS (EXC. 6 CYL. M/T) FUSE BLOCK CIRCUITS


- ⑬ - 20 amp. Visor vanity (exc. Cutlass), dome; trunk & quarter panel lights, rear cigar lighter, power antenna, pulse wiper.
- ⑭ - 20 amp. Stop and hazard warning lights.
- ⑮ - 20 amp. Front cigar lighter, clock, courtesy lights.
- ⑯ - Spare
- ⑰ - 20 amp. Cornering lights (exc. Cutlass), tail, side marker, license and underhood lights.
- ⑱ - Connector - Cruise control and trunk release (exc. Cutlass).
- ⑲ - Connector - Low coolant and trunk release (Cutlass)
- ⑳ - Connector - Power antenna and pulse wiper.

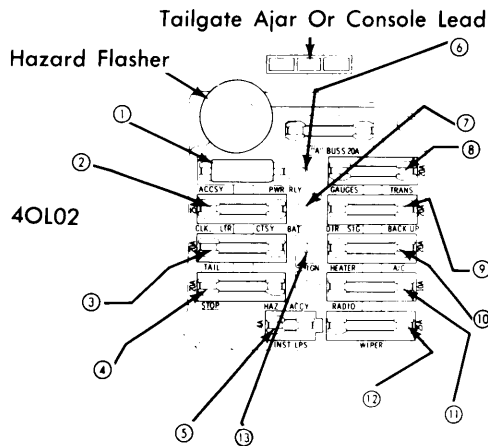

CUTLASS 6 CYL. M/T FUSE BLOCK

### CUTLASS 6 CYL. M/T FUSE BLOCK CIRCUITS


- ① - 40 amp. circuit breaker.
- ② - 25 amp. Dome light, cigar lighter, clock, courtesy lights, trunk light, glove box light.
- ③ - 20 amp. Tail lights, side marker lights, license light, underhood light.
- ④ - 20 amp. Stop lights and hazard warning light.
- ⑤ - 4 amp. Instrument panel lights.
- ⑥ - Power feed ORANGE wire to accessory junction block for power windows, seat, door locks.
- ⑦ - Radio capacitor, pulse wiper, vanity visor.
- ⑧ - 20 amp. Parking brake light, seat belt warning.
- ⑨ - 20 amp. Turn signals, back-up lights.
- ⑩ - 20 amp. Heater, air conditioner, defogger, power window relay.
- ⑪ - 10 amp. Radio.
- ⑫ - 25 amp. Windshield wipers.
- ⑬ - Relay feed PINK wire to accessory junction block for power windows, seats, door locks.

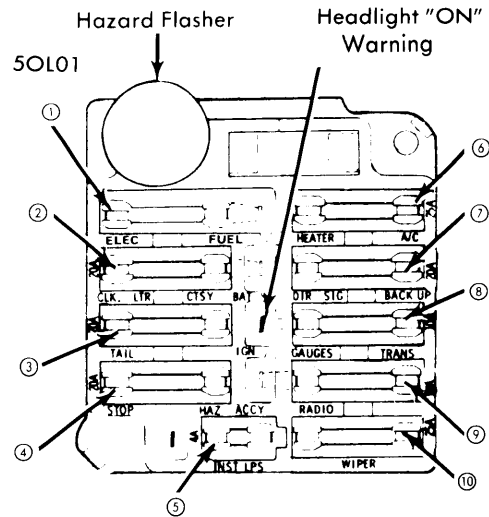

STARFIRE FUSE BLOCK

### STARFIRE FUSE BLOCK CIRCUITS

- ① - 20 amp. Electric fuel pump.
- ② - 20 amp. Dome light, cigar lighter, clock.
- ③ - 20 amp. Tail & side marker lights.
- ④ - 20 amp. Stop & hazard warning lights.
- ⑤ - 4 amp. Instrument panel lights.
- ⑥ - 25 amp. Heater, air conditioner.
- ⑦ - 20 amp. Turn signals, back-up lights.
- ⑧ - 10 amp. Gauges, seat belt warning, low coolant warning, idle stop solenoid.
- ⑨ - 10 amp. Radio, defogger.
- ⑩ - 25 amp. Windshield wipers.

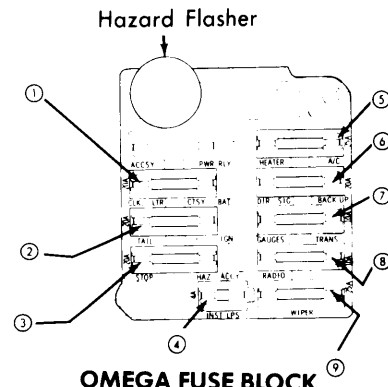

OMEGA FUSE BLOCK

### OMEGA FUSE BLOCK CIRCUITS

- ① - 20 amp. Dome light, cigar lighter, clock, courtesy lights, trunk light, glove box light.
- ② - 20 amp. Tail lights, side marker lights, underhood light.
- ③ - 20 amp. Stop lights, hazard warning lights.
- ④ - 4 amp. Instrument panel lights.
- ⑤ - 25 amp. Heater, air conditioner.
- ⑥ - 20 amp. Turn signals & back-up lights.
- ⑦ - 10 amp. Gauges, seat belt warning.
- ⑧ - 10 amp. Radio, defogger, idle stop solenoid.
- ⑨ - 25 amp. Windshield wipers.