

FIAT (Cont.)

- 1 - 8 Amp. Gauges, Warning Lights, Turn Signals, Stop Lights, Back-Up Lights, Heater, Windshield Wiper, Seat Belt Buzzer Relay, Emission Control System
- 2 - 16 Amp. Interior Lights, Horns, Engine Fan Motor, Hazard Warning Flasher, Remove Key & Seat Belt Buzzer.
- 3 - 8 Amp. Left Headlight High Beam and High Beam Indicator.
- 4 - 8 Amp. Right Headlight High Beam.
- 5 - 8 Amp. Left Headlight Low Beam.
- 6 - 8 Amp. Right Headlight Low Beam.
- 7 - 8 Amp. Left Front Parking and Side Marker Lights, Parking and Tail Lights, Right Tail and Side Marker Lights, and Left License Plate Light.
- 8 - 8 Amp. Right Parking and Side Marker Lights, Left Rear Tail and Side Marker Lights, Right Side License Plate Light, Instrument Cluster Lights, Hazard Warning Flashers, Instrument Control Knob Illumination.
- 2 - 8 Amp. Headlight Motors, Carburetor Fan Relay, Courtesy Light, Key/Seat Belt Buzzer.
- 3 - 8 Amp. Left Headlight High Beam and High Beam Indicator.
- 4 - 8 Amp. Right Headlight High Beam.
- 5 - 8 Amp. Left Headlight Low Beam.
- 6 - 8 Amp. Right Headlight Low Beam.
- 7 - 8 Amp. Left Front Parking and Side Marker Lights, Parking and Tail Lights Indicator, Right Rear Tail and Side Marker Lights, Left License Light, Control and Instrument Illumination Lights.
- 8 - 8 Amp. Right Front Parking and Side Marker Lights, Left Rear Tail and Side Marker Lights, Right License Plate Light.
- 9 - 16 Amp. Hazard Warning Flashers and Indicator, Cigarette Lighter, Rear Window Defogger.
- 10 - 16 Amp. Engine Fan, Horn and Relay.
- 11 - 3 Amp. Headlight Concealing Relay.
- 12 - 3 Amp. Headlight Raising Relay.

128 3P Coupe - Fuse block is located under instrument panel to left of steering column and contains 10 fuses. One additional fuse in separate holder, protects Fuel Pump and Relay (8 Amp). Fuses in block protect the following circuits:

- 1 - 8 Amp. Stop and Back-Up Lights, Windshield Wiper/Washer, Diverter Valve Relay.
- 2 - 8 Amp. Gauges, Indicator Lights, Turn Signals, Heater Blower, Key and Seat Belt Buzzer Relay, Diverter Solenoid Valve.
- 3 - 8 Amp. Left Headlight High Beam and High Beam Indicator.
- 4 - 8 Amp. Right Headlight High Beam.
- 5 - 8 Amp. Left Headlight Low Beam.
- 6 - 8 Amp. Right Headlight Low Beam.
- 7 - 8 Amp. Left Front Parking and Side Marker Lights, Parking and Tail Lights Indicator, Right Rear Tail and Side Marker Lights, Left License Plate Light.
- 8 - 8 Amp. Right Front Parking and Side Marker Lights, Left Rear Tail and Side Marker Lights, Right License Plate Light, Instrument Lights, Heater Control Illumination Light, Hazard Warning Flashers.
- 9 - 16 Amp. Horn Relay, Engine Fan Motor, Courtesy Light.
- 10 - 16 Amp. Cigar Lighter, Remove Key/Fasten Seat Belts Buzzer.

X1/9 - Fuse block is located under instrument panel to left of steering column. Fuse block contains 12 fuses. Fuses in block protect the following circuits:

- 1 - 8 Amp. Gauges, Indicator Lights, Turn Signals, Stop Lights, Back-Up Lights, Heater Blower, Windshield Wiper/Washer, Seat Belt & Key Buzzer System.

131 - Fuse block is located under glove compartment and contains one row of 12 fuses and another row of two fuses. Fuses in block protect the following circuits:

- ① - 8 Amp. Stop & Back-Up Lights, Warning Indicators, Gauges, Heater Fan Motor, Electronic Tachometer; Rear Window, Air Conditioner, Starter Inhibitor Switch & Fasten Seat Belt Relays.
- ② - 10 Amp. Windshield Wiper/Washer
- ③ - 10 Amp. Left Tail & Right Front Parking Lights, Right Front & Left Side Marker Lights.
- ④ - 8 Amp. Left Front Parking & Right Tail Lights, Left Front & Right Side Marker Lights, License Plate Lights, Instrument Lights.
- ⑤ - 8 Amp. Left Outboard Headlight (Low Beam).
- ⑥ - 8 Amp. Right Outboard Headlight (Low Beam).
- ⑦ - 16 Amp. Inboard Headlights (High Beam)
- ⑧ - 16 Amp. Outboard Headlights (High Beam), High Beam Indicator.
- ⑨ - Horn, Horn Relay Winding, Engine Fan Motor.
- ⑩ - 16 Amp. Clock, Courtesy Lights, Cigar Lighter, Radio Antenna Motor (When Installed).
- ⑪ - 16 Amp. Rear Window Defogger, Hazard Warning System.
- ⑫ - 16 Amp. Air Conditioner Compressor & Evaporator Fan & Condenser Motor.
- ⑬ - 16 Amp. Remove Key Buzzer
- ⑭ - Spare Fuse.

HONDA

FUSE BLOCK

Civic & Civic CVCC - Fuse block is located on right side kick panel. Block contains eight fuses. Circuits protected are, from top to bottom:

- ① - 10 Amp. Voltage Regulator.

- ② - 10 Amp. Windshield Wiper/Washer.
- ③ - 10 Amp. Turn Signals, Back-Up Lights, Fuel Gauge.
- ④ - 15 Amp. Heater, Radio, Rear Window Defogger.
- ⑤ - 15 Amp. Hazard Warning Light, Horn, Stop Lights.
- ⑥ - 10 Amp. Cig. Lighter, Clock, Interior Lights.
- ⑦ - 15 Amp. Taillights, License Light, Instrument Lights.
- ⑧ - 15 Amp. Headlights.

HONDA (Cont.)

Accord — Fuse block is located under the dashboard on drivers side. Block contains 10 fuses. Circuits protected are, from top to bottom:

- ① — 10 Amp. Windshield Wiper/Washer.
- ② — 10 Amp. Voltage Regulator, Fuel Pump.
- ③ — 10 Amp. Turn Signals, Back-Up Lights, Fuel Gauge.
- ④ — 15 Amp. Headlight High Beam.
- ⑤ — 15 Amp. Headlight Low Beam.
- ⑥ — 15 Amp. Taillights, Instrument Lights

- ⑦ — 10 Amp. Cig. Lighter, Clock Interior Lights.
- ⑧ — 15 Amp. Hazard Warning Lights, Horn, Stop Lights.
- ⑨ — 15 Amp. Heater.
- ⑩ — 15 Amp. Radio, Rear Window Defroster.

IN-LINE FUSES

One large 55 Amp. in-line fuse is installed in main battery cable to prevent damage to main wiring harness. Fuse is located in engine compartment near battery.

JAGUAR

FUSE BLOCK

XJ6 Models — Fuse block is located behind instrument panel. Access to fuses is obtained by turning access panel retaining pin counterclockwise until it unlocks. Panel will then drop slightly and bottom edge may be lifted clear of opening. Circuits protected are as follows:

- 1 — 20 Amp. Fog Lights.
- 2 — 15 Amp. Hazard Warning System.
- 3 — 35 Amp. Map and Interior Lights, Cigarette Lighter, Clock, Electric Aerial.
- 4 — 15 Amp. Back-Up Lights, Gauges.
- 5 — 15 Amp. Turn Signals.

- 6 — 35 Amp. Stop Lights, Battery Cooling, Horn Relay, Windshield Washer.
- 7 — 15 Amp. Instrument Lights.
- 8 — 15 Amp. Left Side Marker and Tail Lights.
- 9 — 15 Amp. Right Side Marker and Tail Lights.
- 10 — 50 Amp. A/C and Heater Relay.
- 11 — 50 Amp. A/C Control System and Compressor Clutch, Windshield Wipers.
- 12 — 35 Amp. Rear Window Defogger.

IN-LINE FUSES

Head Lights — High beam is protected by a 25 Amp. in-line fuse and low beam is governed by a 10 amp in-line fuse.

Horn Relay — Circuit is protected by a 17 Amp. in-line fuse.

LANCIA

FUSE BLOCK

Fuse block is fitted to the engine compartment and is provided with a pressure tight cover. Block contains 11 fuses. Circuits protected are as follows:

- ① — 8 Amp. Right Front & Left Rear Side Marker Lights, Side Lights Tell-Tale, Instrument Lights, License Plate Light (Right).
- ② — 8 Amp. Engine Compartment Light, Left Front & Right Rear Side Marker Lights, License Plate Light (Left), Cigar Lighter, Wipe-Speed Change-Over Switch, Hazard Switch.
- ③ — 8 Amp. Left Low Beam.
- ④ — 8 Amp. Right Low Beam.
- ⑤ — 8 Amp. Left High Beam.
- ⑥ — 8 Amp. Right High Beam, High Beam Indicator Light.
- ⑦ — 8 Amp. Stop Lights.

- ⑧ — 16 Amp. Back-Up Light, Windshield Wiper/Washer, Air Conditioner Booster Fan, Coolant Radiator Motor Driven Fan, Emission Control Switches.
- ⑨ — 16 Amp. Turn Indicator, Radio, Electric Antenna Motor, Electric Window Lift, Rear Window Defogger, Cigar Lighter, Air Horns Electro-Compressor, Indicator Lights Instrument Lights.
- ⑩ — 8 Amp. Front & Rear Dome Lights, Clock, Plug-In Socket, Buzzer.
- ⑪ — 25 Amp. Air Horns, Electro-Compressor, Cigar Lighter, Rear Window Defogger, Air Conditioner Booster Fan Motor.

IN-LINE FUSES

In-line fuses protect electric window lifts (25 Amp.), hazard warning signal (16 Amp.), engine coolant motor driven fan (16 Amp.), air conditioner system (25 Amp.) and electric fuel pump (16 Amp.).

LUV

FUSE BLOCK

Fuse block is installed in engine compartment on left inner fender panel near firewall and contains 11 fuses with fuse applications listed on cover. Fuse applications are as follows:

- 1 — 15 Amp. Lighting Switch.
- 2 — 15 Amp. Tail and Instrument Lights.
- 3 — 15 Amp. Turn Signals, Stop Lights, Horn.

- 4 — 15 Amp. Interior Light, A/C.
- 5 — 15 Amp. Heater, Back-Up Lights.
- 6 — 15 Amp. Fuel Pump, Emission Control.
- 7 — 15 Amp. Windshield Wiper/Washer, Cigarette Lighter, Radio.
- 8 — 10 Amp. Right High Beam Headlight.
- 9 — 10 Amp. Left High Beam Headlight.
- 10 — 10 Amp. Right Low Beam Headlight.
- 11 — 10 Amp. Left Low Beam Headlight.