

Fuses & Circuit Breakers

CHRYSLER CORP.

Dodge
Plymouth

FUSE PANEL

"B" & "PB" Models - Located under bottom edge of instrument panel to right of steering column.

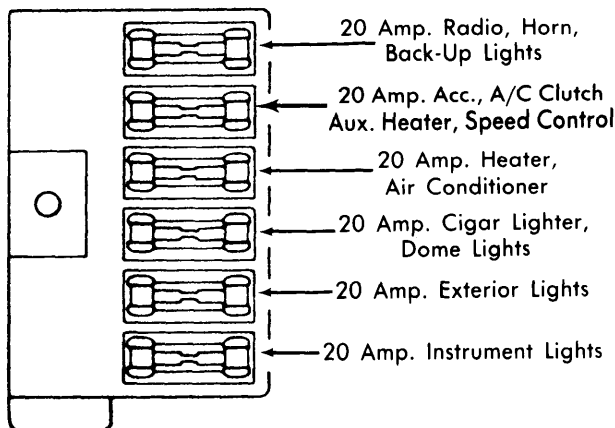


Fig. 1 "B" & "PB" Models Fuse Panel

"M" Models - Location of fuse panel can vary according to manufacturer of body.

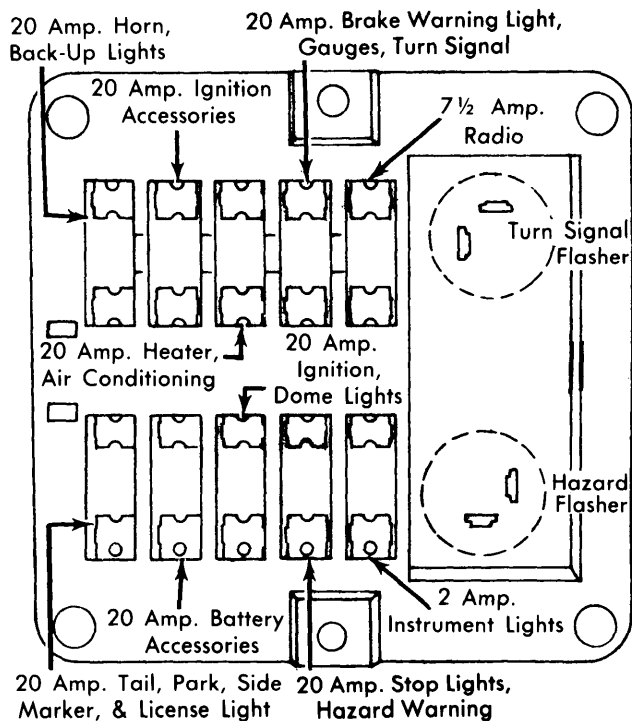


Fig. 2 "M" Models Fuse Panel

"D", "W", "AD", "AW", "PD", "PW" Models - Located behind glove box door.

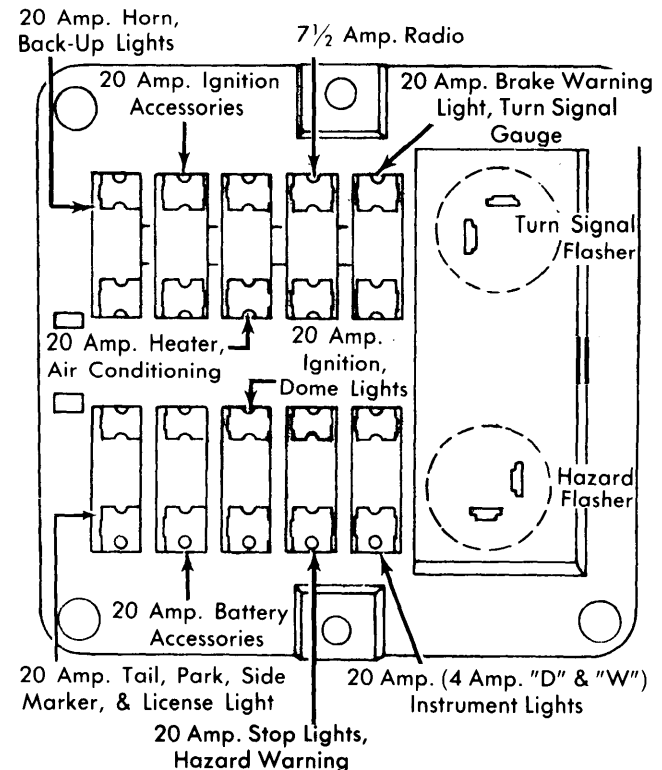


Fig. 3 "D", "W", "AD", "PD", "PW" Models Fuse Panel

CIRCUIT BREAKERS

"M" Models - A 20 amp. circuit breaker is integral with headlight switch.

All Other Models - A 20 amp. circuit breaker is integral with headlight switch. An additional 6 amp. circuit breaker is incorporated into windshield wiper switch.

Trailer Towing Or Camper Option - On "PB" or "B" models a 20 amp. circuit breaker is positioned at the rear of ammeter gauge. On "D" and "W" models a 15 amp. circuit breaker is located on the fuse box.

FUSIBLE LINKS

"M" Models - A fusible link is positioned in the main charging circuit wire harness. A fusible link is also in wiring for hazard warning lamps.

All Other Models - A fusible link is placed in wiring harness of main charging circuit.