

FORD MOTOR CO.

6 CYLINDER ENGINES

300" "E" MODELS

1) Open hood and door, remove engine cover. Drain coolant, remove air cleaner and disconnect battery. Remove front bumper, then remove grille and lower gravel deflector as an assembly. Disconnect radiator hoses at engine.

2) Remove alternator splash shield, disconnect transmission oil cooler lines at radiator (if equipped), remove radiator and shroud. Disconnect heater hoses and alternator wiring at alternator. Remove power steering pump drive belt, then remove power steering pump (with support) from engine. Disconnect and plug fuel line at fuel pump.

3) Disconnect distributor wiring, brake booster hose, and accelerator cable and bracket from engine. Disconnect automatic transmission kickdown (if equipped) at bell crank. Remove exhaust manifold heat deflector and inlet pipe-to-manifold nuts. Disconnect both ends of transmission vacuum line at intake manifold and junction.

4) Remove upper transmission-to-engine bolts. If so equipped, remove automatic transmission dipstick tube support at intake manifold. Raise vehicle on hoist, drain crankcase and remove oil filter. Disconnect and remove starter and flywheel inspection cover. Remove four converter nuts (if automatic transmission), then remove front engine support nuts. Remove remainder of transmission-to-engine bolts. Lower vehicle, install suitable lift chain and remove engine from vehicle.

300" "F" & "P" MODELS

1) Drain cooling system and crankcase. Remove hood or engine compartment cover and mark hinge positions for reassembly. Disconnect battery cables, radiator and heater hoses and fuel line from fuel pump. Remove radiator, fan and water pump pulley. Disconnect accelerator cable and choke cable at carburetor and remove cable retracting spring. Disconnect engine wiring, transmission kickdown rod at bellcrank assembly (automatic transmissions only), engine ground straps, vacuum line at intake manifold (vehicles with power brakes) and exhaust pipe from manifold.

2) Remove alternator mounting bolts and position alternator to one side leaving wires attached. If equipped with power steering, remove pump from mounting brackets and place to one side leaving lines attached. If equipped with air compressor, bleed air system and disconnect air pressure lines at compressor.

3) Raise vehicle on hoist. Remove starter, automatic transmission fluid filler tube bracket and engine rear plate upper right bolt. On vehicles with manual transmission, remove flywheel housing lower retaining bolts and disconnect clutch retracting spring.

4) On vehicles with automatic transmission, remove converter housing access cover, flywheel to converter nuts and then secure converter assembly in housing. Remove transmission oil cooler lines from clip at engine and converter housing to engine lower retaining bolts.

5) On F-100, F-150, F-250 and F-350, remove insulator-to-intermediate support bracket nut from each front engine mount. On all other vehicles, remove engine front insulator bolt. Lower vehicle and support transmission with suitable floor jack. Remove remaining flywheel or converter-to-engine bolts. Attach suitable lifting device to engine, raise engine slightly and pull from transmission, then remove engine from vehicle.

V8 ENGINES

302" "F" MODELS & "U" MODELS

1) Drain cooling system and crankcase. Disconnect radiator hoses, transmission oil cooler lines (if equipped), then remove fan shroud, radiator, fan, spacer and pulley. Disconnect battery and alternator ground wires at cylinder block. Remove air cleaner and intake duct assembly. Remove alternator attaching bolts and position to one side. Disconnect fuel line at fuel tank line, vacuum lines, heater hoses, electrical wiring and ground straps to cylinder block.

2) Disconnect accelerator rod and choke cable from carburetor, then disconnect transmission shift rod and remove retracting spring (if equipped). Remove flywheel housing-to-engine upper bolts. Remove starter and dust seal, then disconnect exhaust pipes from manifolds. Disconnect motor mounts from brackets at frame and remove remaining flywheel housing-to-engine bolts. If equipped with automatic transmission, remove converter inspection plate and torque converter-to-flywheel attaching bolts.

3) Lower vehicle and support transmission with suitable floor jack. Install suitable lifting brackets on front of left cylinder head and rear of right cylinder head. Attach lifting sling and carefully raise engine and pull it from transmission. Lift engine from vehicle taking care that rear cover plate is not bent or other components damaged.

302" & 351-W" "E" MODELS

1) Remove engine cover, open hood and disconnect battery. Drain cooling system, remove grille assembly and upper grille support bracket. Remove hood lock support. Loosen power steering pump (if equipped) and remove belt. Remove power steering pump from mount and position to one side. If equipped with air conditioning, remove compressor retainers and move compressor out of way.

2) Remove accelerator cable bracket. Disconnect upper and lower radiator hoses, and oil cooler lines (if equipped). Remove radiator, fan shroud and fan assembly. Disconnect alternator lead wires at alternator. Remove air cleaner assembly, disconnect throttle and transmission linkage at carburetor.

3) Disconnect all fuel and power leads to engine, remove transmission-to-engine upper bolts. Raise vehicle on hoist, drain crankcase and remove oil filter. Disconnect exhaust inlet pipes at exhaust manifolds. Remove automatic transmission fill tube (if equipped) at cylinder head.

Engine Remova

FORD MOTOR CO. (Cont.)

4) Remove engine mount attaching bolts. Disconnect starter cable and remove starter motor. Remove remaining transmission-to-engine bolts. Lower vehicle, attach lifting chain to engine, move suitable hoist into position and remove engine from vehicle.

360" & 390" "F" MODELS

1) Remove hood, marking hinges for reassembly. Drain cooling system and crankcase. Disconnect battery cables, electrical wiring, oil cooler lines (if equipped), and all heater and radiator hoses. Remove radiator, shroud, and fan assembly. Drain air system (if equipped) and disconnect air line at compressor.

2) Disconnect exhaust pipes from manifolds, accelerator linkage at dash, choke cable and throttle cable from carburetor, tachometer cable from distributor and fuel line from fuel pump. Remove coil with bracket and starter motor from engine. Disconnect body-to-engine ground strap, treadle valve air line and wiring harness. Disconnect drive shaft center bearing retainer from crossmember.

3) Position suitable floor jack under transmission to support it. Remove clutch housing cover and housing-to-engine lower bolts. Secure suitable lifting brackets to cylinder heads and remove nuts securing engine front support to upper insulator. Remove remaining housing to engine bolts. Secure lifting sling to brackets and raise engine high enough to remove bolts attaching front support bracket to upper insulator. Carefully lift engine away from transmission and out of chassis.

460" "F" MODELS

1) Drain cooling system and crankcase. Disconnect battery cables, radiator hoses and transmission oil cooler lines. Remove hood, air cleaner and intake duct assembly. Remove fan shroud, fan, radiator upper support and radiator. Disconnect fuel line at fuel pump, ground cable at block and heater hoses. Remove drive belts and water pump pulley. Remove alternator with mounting bracket and wire attached, then position to one side.

2) If equipped with air conditioning, discharge refrigerant from system, remove clamp bolt at muffler support (if equipped), and position refrigerant lines to one side. Disconnect compressor clutch wire and remove air conditioning compressor from vehicle. Remove compressor mounting bracket and idler pulley.

3) Remove power steering pump (if equipped) and position to one side. Remove transmission filler tube attaching bolt from rocker arm cover and position tube to one side. Disconnect vacuum lines at rear of intake manifold, speed control cable at carburetor and bracket, and accelerator rod and transmission rod at bell crank. Disconnect engine wiring harness at multi-connector on dash.

4) Raise vehicle on hoist and disconnect exhaust pipes at manifolds. Disconnect starter cable, remove starter attaching bolts and starter from vehicle. Remove converter housing cover, converter-to-flywheel attaching nuts and converter-to-engine lower rear cover plate bolts. Remove engine front mount-to-bracket through bolts. Hold transmission in position using a suitable support tool.

5) Lower vehicle on hoist. Remove converter housing-to-block upper attaching bolts. Disconnect coil wire, and remove coil and bracket assembly from manifold. Attach a suitable sling (T53L-300-A) and hoist to lifting brackets at exhaust manifolds. Carefully remove engine from vehicle.

460" "E" MODELS

1) Remove engine cover, open hood and disconnect battery. Drain cooling system, remove grille assembly, upper grille support bracket, hood lock support and condenser upper mounting bracket. Discharge air conditioning system (if equipped) and remove condenser. Disconnect air conditioner lines at compressor, remove accelerator cable bracket.

2) Disconnect upper and lower radiator hoses, disconnect oil cooler lines at radiator (if equipped) and remove radiator. Remove fan shroud and fan assembly. Disconnect all fuel and power leads to engine. Remove air cleaner assembly, disconnect throttle and transmission linkage at carburetor, remove carburetor.

3) Raise vehicle on hoist, drain crankcase, remove oil filter. Disconnect muffler inlet pipe at exhaust manifolds. Remove two bolts retaining transmission filler tube bracket to cylinder head. Remove engine mount attaching bolts, disconnect starter cable and remove starter motor.

4) Remove converter inspection cover, remove four bolts attaching converter to flex plate, then remove three bolts retaining adapter plate to converter housing. Remove lower converter housing-to-engine bolts and bolt securing ground cable to engine block. Lower vehicle to working level.

5) Loosen power steering pump bracket (if equipped) and remove drive belt. Remove power steering front face bracket bolts. Disconnect heater and vacuum hoses from engine, disconnect and position engine wire loom out of way. Remove speed control servo and accelerator cable bracket from intake manifold and move to one side.

6) Remove flex tube from exhaust manifold stove. Disconnect air conditioner magnetic clutch load wire (if equipped). Install suitable lifting bracket to intake manifold. Remove remaining upper transmission-to-engine bolts. Position floor jack under transmission for support. Connect hoist to engine and remove engine from vehicle.

TIGHTENING SPECIFICATIONS

Application	Ft. Lbs.
Converter Housing-to-Engine	
V8.....	33-45
6 Cyl.....	23-33
Converter-to-Flywheel	
V8.....	20-30
6 Cyl.....	20-30
Front Mount-to-Engine	
V8.....	45-55
6 Cyl.....	45-55
Flywheel Housing-to-Engine	
V8.....	33-45
Rear Mount-to-Transmission	
V8.....	55-65
6 Cyl.....	40-60